


BUTTON-MAKER

1st Press

Put the three layers down
Slide this side under the machine
Pull down on the lever
(This compresses the layers together
and picks them up)

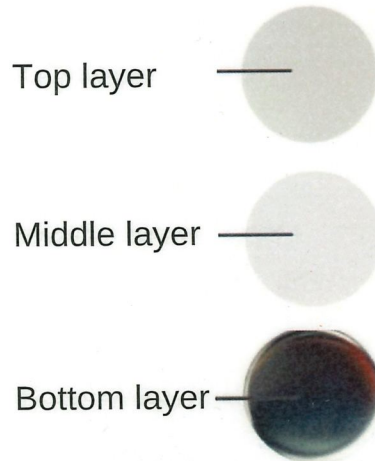


Top layer

Middle layer

Bottom layer


Template

(This is the size and shape
your image should be)

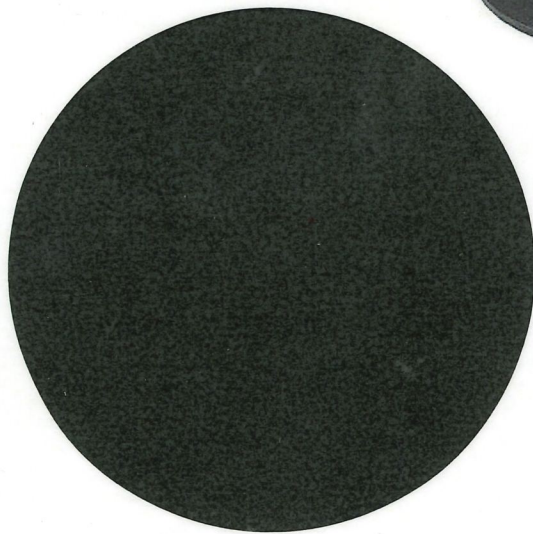

2nd Press

Put the pin-back on here
The side that pins to the fabric should face down
Slide this side under the machine
Pull down on the lever
(This compresses everything into the final pin)

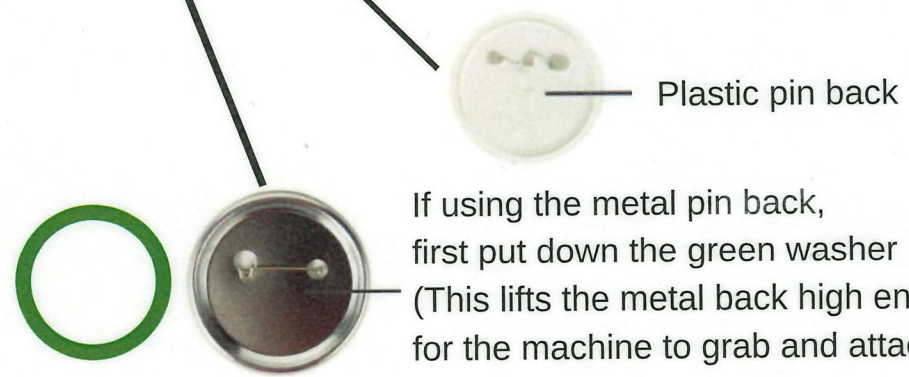

Plastic pin back

If using the metal pin back,
first put down the green washer
(This lifts the metal back high enough
for the machine to grab and attach it)